



GRIP MOUNT - QUICK SETUP GUIDE

-  **ABOUT THIS**
The Drum Rug Lock (Velcro Version) is a low-profile positioning system that locks your drums and stands in the exact same place every time—without cutting, drilling, or modifying your rug. Set it once, press it down, and you're locked in.
- 1** **DIAL IN YOUR KIT**
Set up your drums, stands, and rug exactly how you want them. Take your time—this is the position you'll return to every time you play.
- 2** **PLACE YOUR LOCK**
With the top plate and Velcro base already bolted together, slide the unit around the leg or stand you want to secure. Make sure it's sitting flat and centered in the final position.
- 3** **PRESS TO LOCK**
Once you're happy with the placement, press the unit firmly down into the rug. The Velcro base grips the underside of the rug, locking the position in place.
- 4** **REPEAT FOR EACH STAND**
Repeat the process for each stand or drum leg you want to lock in.
-  **ONCE INSTALLED, THE SYSTEM IS READY TO GO**
- OPTIONAL COLOUR-CODING SYSTEM**
Each lock has a recessed notch showing where the colour sticker should be placed. Use the included colour stickers to match each set of locks to its stand or legs, and optionally number the legs to match the rug locks for perfect alignment.