



BOLT DOWN - QUICK SETUP GUIDE



ABOUT THIS

The Drum Rug Lock is a permanent, low-profile positioning system that locks your drums and stands into the exact same place every time. Set it once. Never guess again



DIAL IN YOUR KIT

Set up your drums and stands on your rug exactly how you want them. Take your time — it's best to do this once and do it right.



MARK YOUR POSITIONS

Place the top plate around the leg or stand you want to lock. Using the two holes as a guide, mark the rug where the holes sit.



CREATE PRECISION HOLES

Remove the top plate. Using the markings, carefully make two small, clean holes in the rug.



INSERT THE BOTTOM PLATE

Lift the rug gently and feed the bottom plate (thin plate with non-slip pads) up through the holes from underneath. This creates two perfectly aligned threaded points.



SECURE THE LOCK

Place the top plate back on from above, lining it up with the exposed threads and tighten using Allen keys on both sides until secure. Repeat for each stand or drum leg.



ONCE INSTALLED, THE SYSTEM IS PERMANENT, SOLID, AND SLIP-FREE



OPTIONAL COLOUR-CODING SYSTEM

Each lock has a recessed notch showing where the colour sticker should be placed. Use the included colour stickers to match each set of locks to its stand or legs, and optionally number the legs to match the rug locks for perfect alignment.